BARCOPER®

The most advanced sealing system to transport fresh products and ready meals



EASY TO USE · RELIABLE FOR TRANSPORT · CONVENIENT TRAYS



EXCLUSIVE ADVANTAGES OF THE BARCOPER® SYSTEM

- Simple and robust stainless steel machines
- A lidding system ensuring perfect sealing and hygiene
- Flexible and highly resistant, microwave safe polypropylene trays
- Recyclable, microwave and oven safe cardboard trays
- Customizable plastic wraps
- Highly profitable investment



- Narrow machine to save space (open machine dimensions, without wrap: length 480 x width 200 + height 520mm)
- Wide range of tray sizes: from 375g to 1500g
- Easy plastic wrap positioning
- Self-regulation of temperature
- Easy sealing mechanism





MAXI-BARCOPER®

- · Machine for trays up to 230 mm wide (open machine dimensions, without wrap: length 480 x width 310 + height 580mm)
- Wide range of tray sizes: from 600g to 2100g
- · Wide-width trays for flat layout
- · Easy plastic wrap positioning
- · Self-regulation of temperature
- Easy sealing mechanism







Polypropylene trays specifically designed

wide edges for perfect sealing, reinforced material for improved resistance to weight and heat.

Microwave safe (make a hole in the lid to let the steam out).





BARCOFILM UNIVERSAL PLASTIC WRAP

For polypropylene and cardboard trays

MAXI-BARCOPER

Transparent, peelable and highly resistant plastic wrap. Customizable from 12 rolls.

Mini-Barcoper® Barcofilm: 125mm x 300MI Maxi-Barcoper® Barcofilm: 210mm x 300MI

CARTOPER®

Trays made of recyclable cardboard, with PET film inside.Can be used in ovens (180° max) and microwaves. Black in the inside to enhance preparations, kraft on the outside for a natural cardboard look.

MICROPACK 2000 - 6 sizes, transparent or black - L x W + H mm


























































MINI-BARCOPER®

6 sizes, black recyclable cardboard and brown kraft - L x W + H mm - CARTOPER®


6 sizes, transparent - L x W + H mm - MAXI-MICROPACK 2000



MAXI-BARCOPER®

SET UP & USE

Easy plastic wrap set up, identical for both machines.

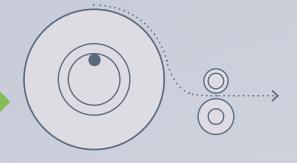



Easy to use

- Turn on the machine and let it heat.
- Place the filled tray in the dedicated slot in front of the plastic wrap exit.
- Oull the plastic wrap up to the fixing guide to fully cover the tray.
- Press the handle until it stops.
- Release when the indicator light goes out (about 2 seconds). The plastic wrap is cut automatically. The tray is sealed and ready!

Sealed tray with peelable plastic wrap

MAINTENANCE & CUSTOMER SERVICE

BARCOPER® machines are highly reliable and require little maintenance.

How to clean them:

- Spray the N502 foam on the parts to clean and disinfect.
- 2 Let it rest for 4/5 minutes.
- Ory with paper wipes.

CAUTION: Do not scrape or use abrasive pads on the welding head.



We take care of customer service

It mainly concerns the replacement of 2 parts, due to wear:

- > The blade cutting the plastic wrap (every 2 years).
- > The resistance (every 5 years)

In case of breakdown, we lend you a machine while it's being repaired.

www.papiers-paviot.fr

Tel. +33 (0)4 78 20 73 07 e-mail: info@papiers-paviot.fr

